

Thank you for purchasing one of our custom Xbox 360 Rapid fire controllers. We appreciate your business and work hard to provide a 5 star experience to all of our customers. If you have any questions about your new controller please contact us at support@consolecustoms.com. Below you will find helpful information on using your new controller.

Xbox 360 MaxFire - Lite User Guide

- This mod has many different features and functions which we will explain below. Video tutorials are available for all of these features on our website www.consolecustoms.com and from our YouTube channel www.youtube.com/consolecustoms.
- **Rapid Fire** – This mod contain 10 Rapid Fire Modes which have default speeds built in but are all programmable to any speed between 4 shots per second and 50 shots per second. You can quickly turn on/off the rapid fire by just tapping the mod button on the back of the controller. When the rapid fire is on the player 4 LED will flash. To Change to the Next Rapid Fire Mode you just need to hold the mod button of the controller for 3 seconds. You will see both the player 3 and Player 4 LED's flash. They will flash to indicate the now current mode (3 flashes = Mode 3). You can also go backwards in the modes by holding the right trigger along with mod button. See the programming guide on the next page for more information. Below are the default speeds for each mode.
 - Mode 1: 8.33sps - Black Ops (rifles), COD MW2, COD 4
 - Mode 2: 11.35sps - Black Ops (pistols), COD MW2, COD 4
 - Mode 3: 20sps - All Halo series
 - Mode 4: 6.85sps - GOW 2/3 (hammerburst)
 - Mode 5: 8sps - GOW 2/3 (Pistols)
 - Mode 6: 16.67sps - GTA4
 - Mode 7: 10sps - COD WaW Fast 10sps
 - Mode 8: 8.33sps - COD WaW slow 8.33sps
 - Mode 9: 20sps
 - Mode 10: 25sps
- **Burst Fire** – By default when you tap the mod button it will turn the normal rapid fire on/off. To change this to burst fire you just need to hold to the right on the right thumbstick and tap the mod button. Now when you tap just the mod button by itself the rapid fire will be in burst mode and the player 4 LED will turn on solid instead of flashing. The burst fire will fire at the current Modes Rapid fire speed and fire the number of rounds set in the programming mode (default is 3 round burst). To turn off the burst fire and go back to normal Rapid fire you just need to hold to the left on the right thumbstick and tap the mod button, you will now be back to normal rapid fire.
- **Dual Rapid Fire** – By default only the right trigger is enabled for Rapid Fire. You can quickly enable the Left Trigger by Holding in the Left trigger and Tapping the mod button. You will see the player 3 LED turn on. The player 3 LED will stay on all the time even if the rapid fire is off, but it will only rapid fire while Rapid fire or Burst Fire is turned on.

PROGRAMMING THE RAPID FIRE

Each Rapid fire Mode can be Programmed to one of 50 different speed in-between 4 shots per second and 50 shots per second. You can also set the Burst fire for each mode from 2 – 10 shots per burst.

- **Enter/Exit the Programming Mode** – To Enter or exit the programming mode you must first press and hold both triggers and then press and hold the mod button. Continue to hold all three for 5 seconds. You will see the player 4 LED flash on for 2 seconds then go out. You have now entered or exited the programming mode and can release both triggers and the mod button.
- **Change Rapid Fire speed** – To change the rapid fire speed you just need to move the right thumbstick to the left or right. More it to the right to make the speed faster and to the left to make it slower. The player 4 LED will flash every time you move the thumbstick to the right and the player 3 LED will flash every time you move the thumbstick to the left to indicate you have made a change. Once you have reached the MIN or MAX speed the LED will no longer flash.
- **Change Burst Fire Quantity** – To change the number of shots fired with the burst fire you just need to HOLD in the right trigger and while holding follow the same procedure as changing the rapid fire by moving the thumbstick to the left or right.
- **Check Rapid Fire speed Setting** – To check the currently set rapid fire speed you only need to tap the mod button. The player 3 Led will flash the “tens” and position and the player 4 will then flash the single digit. (Example. Player 3 flashes 3 times, followed by the player 4 flashing 6 times, you are now at speed setting 36) Refer to the table below for all of the speed settings.
- **Check Burst Fire Setting** – To check the currently set burst fire setting you must HOLD the right trigger and while holding the right trigger tap the mod button. The player 4 Led will flash 2-10 times to indicate the number of shots set for the burst fire.
- **Reset Current Mode to Default settings** – To reset the Rapid fire mode you are currently editing to the factory default you must hold the left trigger for 7 seconds. After 7 seconds the player 3 and 4 LED’s will both flash very fast for 2 seconds indicating the default values have been loaded and saved.

Rapid Fire Setting	Shots Per Second	Rapid Fire Setting	Shots Per Second
1	50	26	13.89
2	45.5	27	13.51
3	41.7	28	13.16
4	38.4	29	12.5
5	35.7	30	12.2
6	33.3	31	11.91
7	31.25	32	11.63
8	29.4	33	11.42
9	27.8	34	11.11
10	26.3	35	10.64
11	25	36	10.3
12	23.91	37	10
13	22.73	38	9.8
14	21.74	39	9.62
15	20.83	40	9.36
16	20	41	9.09
17	19.23	42	8.62
18	18.52	43	8.33
19	17.86	44	8.2
20	17.24	45	8
21	16.67	46	7
22	16.13	47	6.67
23	15.63	48	6
24	15.15	49	5
25	14.71	50	4