

Thank you for purchasing one of our custom Playstation 3 Rapid fire controllers. We appreciate your business and work hard to provide a 5 star experience to all of our customers. If for any reason you are having trouble with your controller or have general questions, please contact us at support@consolecustoms.com. Below you will find helpful information on using your new controller or mod.

PS3 TrueFire Standard rapid fire:

- This mod has many different features and functions which we will explain below. Video instructions are available for all of these features on our website www.consolecustoms.com or from our youtube page www.youtube.com/consolecustoms.
- This controller has 3 game modes. Each mode has speeds designed for specific games but these are not the only games they will work for, this mod chip will work for almost every first person shooter available with the addition of our user programmable mode.
- To change the speed setting you only need hold the button on the D-pad and tap the right side rapid fire button. To switch the game mode you must hold the button on the D-pad and also hold the right side rapid fire button 4 seconds, after which you will see the player 4 LED flash. The number of flashes indicates the game mode. The chip will remember the game mode you are in even after turning off your controller.
 - Game Mode 1: Call of Duty 4 / Modern Warfare 2
 - OFF
 - Speed 1 – Fast
 - Speed 2 – Slow
 - Speed 3 – 3-round Burst
 - Game Mode 2: Call of Duty: Worlds at War
 - OFF
 - Speed 1 – Fast
 - Speed 2 – Slow
 - Speed 3 – 3-round Burst
 - Game Mode 3: User Programmable - This mode has standard firing and a burst fire speed that can be set by the user to one of 15 different speeds. You can also set the burst fire from 2 – 10 rounds. Programming instructions on next page.
- Assigning Controller buttons - You can assign any of the controller buttons (R1, R2, L1, L2, ▲, O, X, ■) to either of the rapid fire buttons (they can even be the same, both the left and right buttons could be assigned to R1 rapid fire if you desire). To assign controller buttons to the rapid fire buttons you will need to hold UP on the D-PAD for 4 seconds. After 4 seconds you will see the player 4 LED flash very fast for 2 seconds and then go out. This means you are in the button assignment mode and can now let go of UP on the D-PAD. Now all you need to do is hold the rapid fire button you want to assign and while holding the button press the controller button (such as R1). You will see the player 4 LED flash indicating a successful assignment. Release both buttons and follow the same procedure for the second rapid fire button if you desire. Once your button assignments are complete you will need to follow the same procedure of holding UP on the D-PAD for 4 seconds until the player 4 LED flashes very fast for 2 second. You are now out of the rapid fire buttons assignment mode and can use the rapid fire buttons.

Thank you,
Console Customs

Changing the User adjustable rapid fire speed

- These instructions are also available as a video from our website www.consolecustoms.com and also our youtube page www.youtube.com/consolecustoms.
1. You first need to be in the user adjustable game mode (Game Mode 3). Use the procedure described on the previous page to switch the controller to the correct mode.
 2. Once in the user adjustable game mode. You will need to hold in (R1, R2, L1 and L2) all at the same time. Hold all 4 buttons for 5 seconds. You will see the player 4 LED come on and stay on for 2 seconds and then go out. This means you are now in the programming mode and can let go of the 4 buttons.
 3. While in the programming mode you will use the D-PAD to adjust the rapid fire speed and also the burst fire quantity. Use the UP and Down arrows on the D-Pad to adjust the rapid fire speed (UP = Faster, Down = Slower) Use the left and right arrows to adjust the burst fire quantity. (LEFT = Fewer, RIGHT = More)
 4. When pressing an arrow button you will see the player 4 LED flash 1 time to indicate that you have made a change. Once you have reached the min or max value the LED will no longer flash when pressing that arrow button.
 5. At any time you can check your current settings by Pressing the X or ▲. Pressing X will make the player 4 LED flash the number of bursts the burst fire is set to. Pressing ▲ will flash the current speed setting (1-15) Use the table below to see the conversion of each setting into shots per second. If the speed setting is greater than or equal to 10 the player 4 LED will have a longer flash to indicate 10 followed by shorter flashes to indicate the single digit. Example the LED flashing in a pattern of (---, -, -, -) one long flash followed by 3 short flashes would mean a setting of 13.
 6. To exit the user programmable mode just follow step 2 above. The mod will remember your setting even when the controller is turned off.

Rapid Fire Setting	Shots Per Second	Rapid Fire Setting	Shots Per Second
1	50	9	10
2	33.33	10	9
3	25	11	8.33
4	20	12	7.7
5	16.66	13	7.14
6	14.28	14	6.66
7	12.5	15	6.25
8	11.11		